

13L
9813
+
4713


Ford Kuga, Individual / Titanium Md. 03/2013

Adapter kit for 13L4713 at Ford Kuga, Individual / Titanium
Adaptersatz für 13L4713 bei Ford Kuga, Individual / Titanium
Kit Adaptateur pour 13L4713 à Ford Kuga, Individual / Titanium



ASSEMBLY INSTRUCTION

Montageanleitung • Instructions de montage

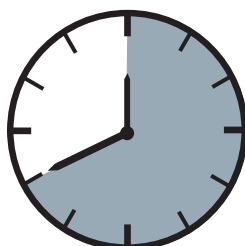







40 Minuten

Artikel-Nr:
13L9813 Adapter-kit

Revision 1: 09.06.2015


www.antec-online.de


13L4713 not include

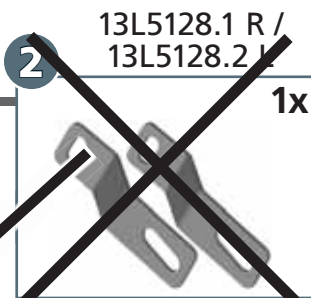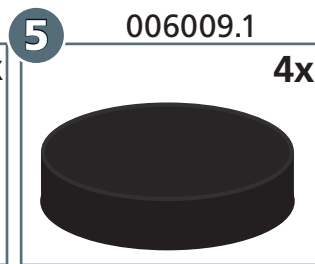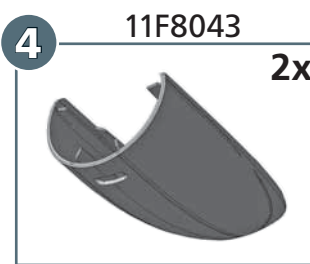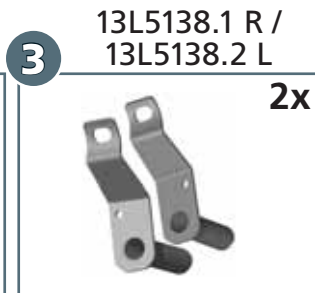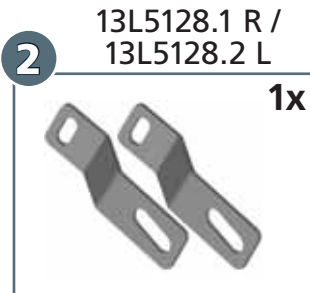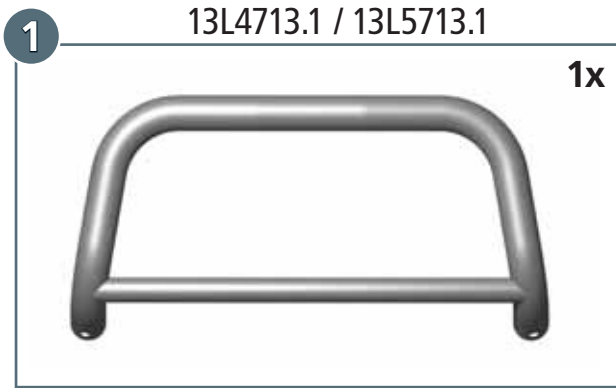

a		M6 x 25; DIN 933 Zn	4x
b		M8 x 20; DIN 933 A2	2x
c		M8 x 25; DIN 933 Zn	2x
d		M8 x 20; DIN 912 A2	2x
e		Ø 4,8 x 19; DIN 7981 Form C A2	4x
f		Ø 3,5 x 13; ähnl. 7981B A2	2x
g		Ø 6,4; DIN 9021 Zn	4x
h		Ø 8,4; DIN 9021 A2	4x
i		Ø 8,4; DIN 9021 Zn	2x
j		Ø 5,3; DIN 9021 A2	4x
k		Ø 4,2; DIN 9021 A2	2x
l		Ø 6; DIN 127 Zn	4x
m		Ø 8; DIN 127 A2	4x
n		Ø 8; DIN 127 Zn	2x
o		Getowell M6	2x
p		Getowell M8	2x
q		SW 13	2x



EBA 13L4713
Step 1 - 13

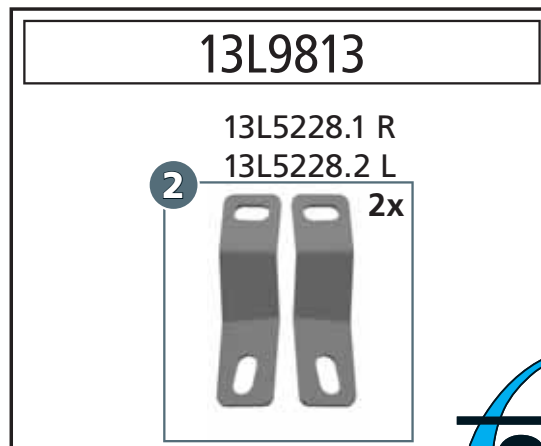

Revision 1: 09.06.2015