


# Škoda Yeti; Modell 2009

Front Bumper Protection Pipe / Stoßfängerschutz vorne



## FITTING INSTRUCTIONS

Montageanleitung • Instructions de montage  
Instrucctionnes de montaje • Manual

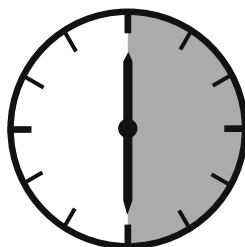

30 Minuten

Artikel-Nr:  
14K 4081 Stainless Steel




Revision I: 12.11.2009

  
www.antec-online.de

# Škoda Yeti; Modell 2009



Front Bumper Protection Pipe / Stoßfängerschutz vorne

## Required tools / Benötigte Werkzeuge / Outillage requis / Herramientas necesarias

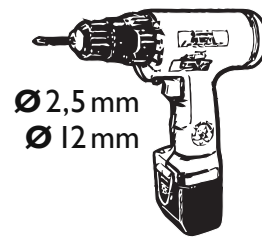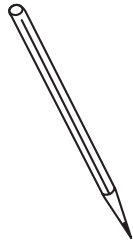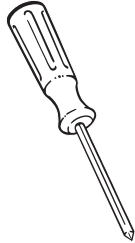


Ø 2,5 mm  
Ø 12 mm

## Parts list / Teileliste / Lista de accesorios
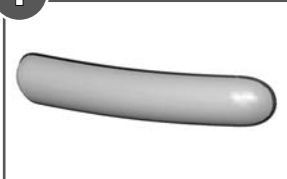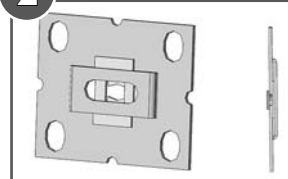
<b>1</b>	14K4081.1R / 14K4081.2L	<b>2</b>	005322	<b>4x</b>
				

## Standard Parts list / Normteileliste

<b>a</b>		Ø 3,9x13; DIN 7981 A2	<b>16x</b>
----------	--	-----------------------	------------

Artikel-Nr:  
14K 4081 Stainless Steel

Revision I: 12.11.2009

