


# Toyota Urban Cruiser; Modell 2009

EU-Pedestrian Protection Guard 60 with Horizontal Pipe 42 /  
EU-Personenschutzbügel 60 mit Querrohr 42



## FITTING INSTRUCTIONS

Montageanleitung • Instructions de montage  
Instrucciones de montaje • Manual

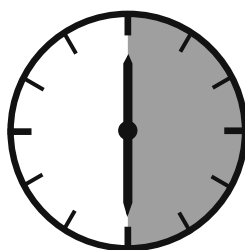

30 Minuten

### Artikel-Nr:

14N 4013 Stainless Steel  
14N 5013 Steel black  
14N 9013 Mounting Set




Revision I: 20.01.2010



# Toyota Urban Cruiser; Modell 2009

EU-Pedestrian Protection Guard 60 with Horizontal Pipe 42 /  
EU-Personenschutzbügel 60 mit Querrohr 42

## Required tools / Benötigte Werkzeuge / Outillage requis / Herramientas necesarias

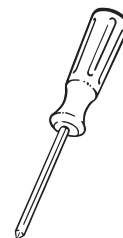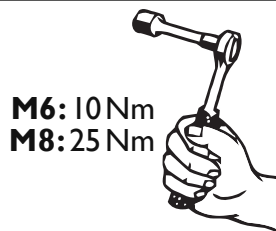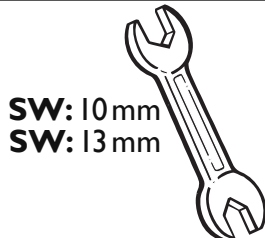

## Parts list / Teilleiste / Lista de accesorios

1 14N 4013.1 (14N5013.1)



## Mounting set 14N9013 / Montagesatz 14N9013

2 14N5024R/14N5025L



3 14N 5120 2x



4 IIF 8043 2x



## Standard Parts list / Normteilleiste

a		M6x25; DIN 933	4x
b		M8x20; DIN 912	2x
c		M8x20; DIN 933	2x
d		ø6; DIN 127	4x
e		ø8; DIN 127	2x
f		ø 6,4; DIN 9021	4x
g		ø 8,4; DIN 9021	2x
h		ø 8,4; DIN 125	2x
i		ø3,4x13; DIN 7981 A2	2x
k		SW13	2x

### Artikel-Nr:

14N 4013 Stainless Steel  
14N 5013 Steel black  
14N 9013 Mounting Set

Revision I: 20.01.2010

